

AC[®] SCHNITZER

-Installation instructions-

Motor pad right

- S 1000 RR from Modell 2019 -



Part number: S700374-F15

General notes!



AC Schnitzer – S1000RR from Modell 2019–

Important notes!

It is essential to read these installation instructions before starting the installation work. AC Schnitzer accepts no liability whatsoever for damage caused by improper installation!

These installation instructions are intended exclusively for use by authorised AC Schnitzer or BMW dealers. The target group for these installation instructions is always specialist personnel trained on BMW vehicles with the appropriate specialist knowledge and tools. Knowledge regarding material properties and standards is assumed!

The crash pads offered by AC Schnitzer provide protection for the frame and the add-on parts in the event of "overturns" or so-called "slips". Unfortunately, even these components are no guarantee for accidents without consequential damage. So it is quite possible that the crash pads hook onto protruding parts such as curbs, manhole covers, kerbs, etc. during "slides" and give way to the force acting on them.

Any resulting consequential damage is the sole responsibility of the person who caused the fall and cannot be claimed from AC Schnitzer. Please inform your customers about this fact!

Mounting

All work must be carried out in accordance with the applicable safety regulations (e.g. protective goggles).

Paint

n/a

Installation time (1 AW = 5 minutes)

The installation time is approx. **2 AW**, which may vary depending on the condition and equipment of the vehicle.

Paint (1 AW = 5 minutes)

n/a


Required tools

- T60 socket spanner
- 19 mm socket spanner
- 6 mm socket spanner hexagon socket
- Cleaning agents

Assembly instruction number: S700374-F15 / Stood: 28.07.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135

AC Schnitzer

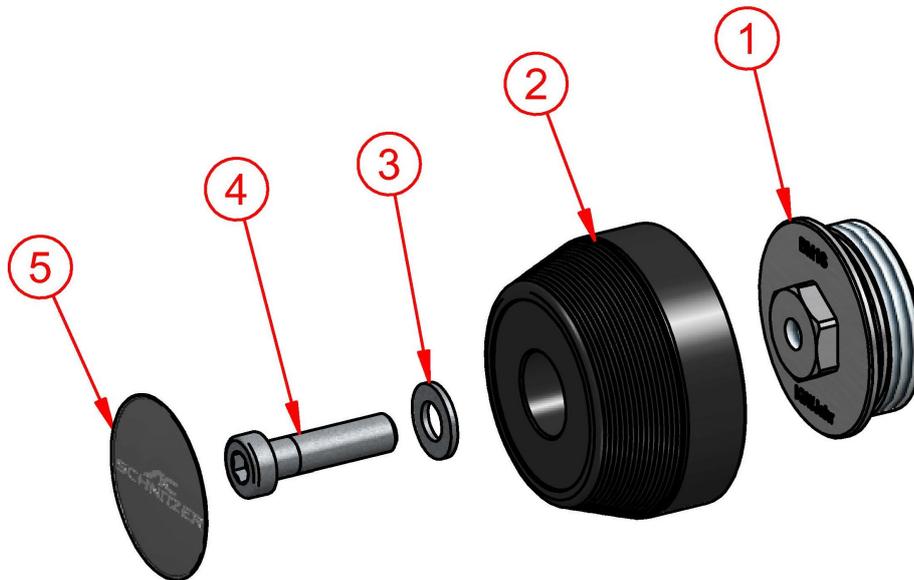


Pos.	Titel	Anzahl
1	Motordeckel für Sturzpad BM1S	1
2	Sturzpad Motordeckel R BM1S	1
3	Scheibe DIN 125 - A 8,4	1
4	Zylinderschraube DIN 6912 - M8x30	1
5	ACS Aufkleber rund schwarz	1

AC Schnitzer


Park the vehicle safely with a motorbike stand with a motorcycle stand.



Loosen and remove the right inspection cover.

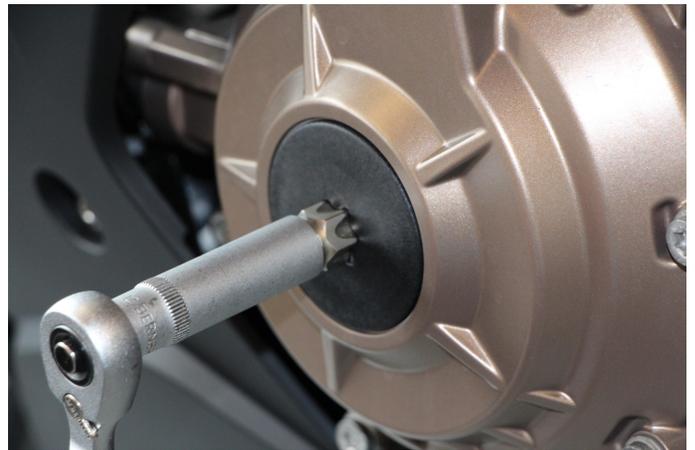

Remove the O-ring from the original cover and place it onto the new cover up to the collar insert.

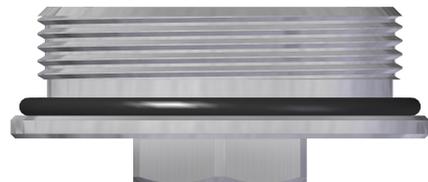

Tip: Coat the collar with grease to hold the O-ring in place.



Installation instructions



AC Schnitzer

Fit the enclosed inspection cover.

Torque: 12 Nm




Fit the motor pad with the enclosed screw and washer.

Torque: 12 Nm



Clean the adhesive surface for the sticker on the motor pad.

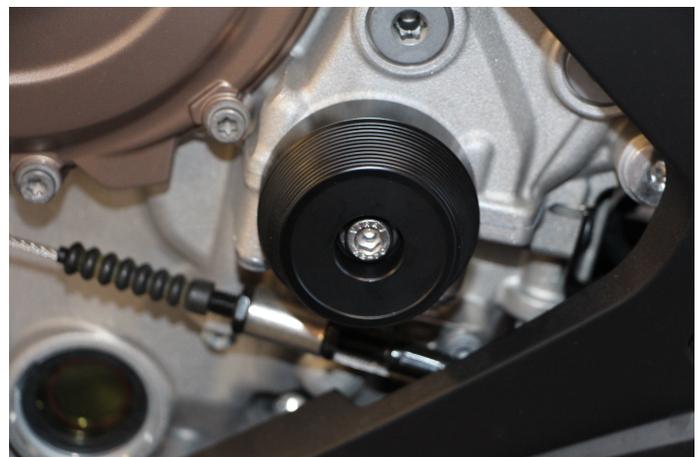

Apply sticker.



Assembly instruction number: S700374-F15 / Stood: 28.07.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135